


Pokit Pro Temperature Probe User Manual



FOR USE WITH MODEL: POK-PRO

Taking Temperature Measurements

When measuring temperature with the external temperature probe make sure the switch is set to resistance measurement.


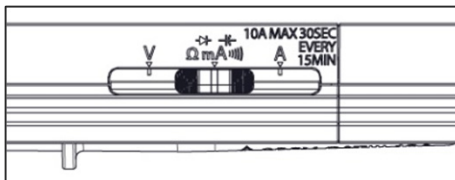


Banana Adaptors

The banana adaptors are rated for measurement category III, 600V, and so can safely be used to measure voltages up to 600V AC or DC.

Press the banana adaptors onto the ends of the probe leads.


WARNING: Before taking any measurements, ensure the banana adaptors are pushed all the way onto the pins, and the pins aren't visible.

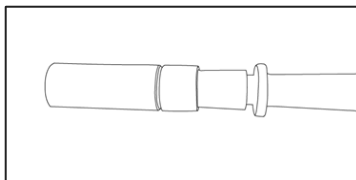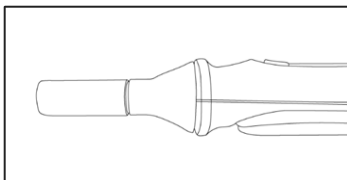

External Temperature Probe

Once the banana adaptors are securely fitted, plug the temperature probe terminals into the banana adaptors. The terminals can be fitted to either the positive or ground Pokit Pro probes.

Using the Pokit App, select the External Temperature measurement mode to start measuring.

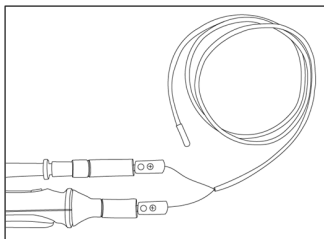

Website: www.pokitinnovations.com

Email: support@pokitmeter.com

Address:

Pokit Innovations
Suite 2.2, 56 Delhi Rd,
North Ryde,
NSW, 2113
Australia